


Smart Classroom

Extron MLC Controller

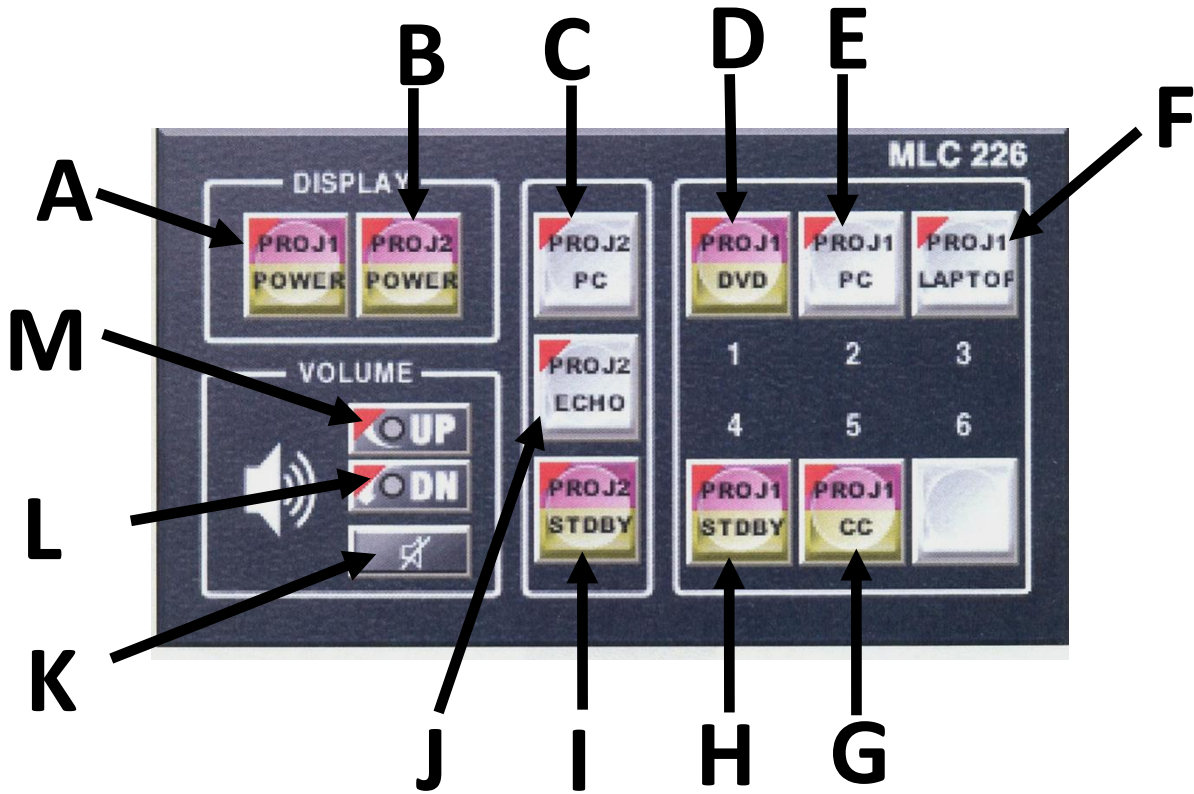

	Button Description	Button Function
A.	Power-on Button (Standard Projector)	Turns on old style (Standard) overhead projector.
B.	Power-on Button (Smart-Board Projector)	Turns on Smart-Board Projector (Board with stylus [The Pen]).
C.	Resident Computer Display Command Button (Smart)	Allows the user to view resident computer on Smart-board.
D.	DVD & VCR Command Button	Allows user to turn on the DVD & VCR on the Standard Projector Screen (SPS).
E.	Resident Computer Display Command Button (Standard)	Allows the user to view resident computer on SPS.
F.	Laptop Display Command Button	Allows the user to display a connected laptop on the Standard Projector. Button "A" must be turned on prior to connecting laptop for display on the SPS.
G.	Close Caption Command Button	Allows the user to display text with media (Media must be programmed to display captions).
H.	Stand-by Button (Standard Projector)	Allows the user to close (but not shut down) the SPS (Sleep mode). To use during a lecture when the projector is not needed. Important: Make sure the system is totally shut down before leaving classroom.
I.	Stand-by Button (Smart Board Projector)	Allows the user to close (but not shut down) the Smart Board (Sleep mode). To use during a lecture when the projector is not needed. Important: Make sure the system is totally shut down before leaving classroom.
J.	Echo Command Button	Allows the user to display identical images on both boards at once.
K.	Mute Command Button	Allows the user to mute speakers.
L.	Decrease Volume Command Button	Allows the user to decrease speaker volume.
M.	Increase Volume Command Button	Allows the user to increase speaker volume.